




## TravelGuide: Transmitter

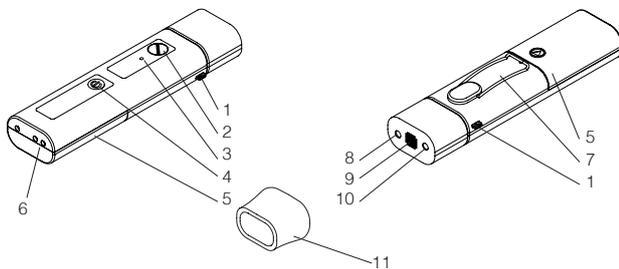

1. Eyelet for neck strap
2. Channel selector switch
3. LED
4. "On/Off" button
5. Battery compartment
6. Charging contacts
7. Clip
8. Microphone sensitivity selector
9. Microphone jack for external microphone
10. Microphone
11. Wind screen

### Switching On/Off and Setting a Channel


1. Switch the transmitter on with the "On/Off" button. If no sound is received by the microphone for 6 minutes the transmitter will switch off automatically.
2. The LED flashes 3 times. The color indicates whether the device is in battery mode (red) or rechargeable battery mode (green).
3. The LED lights up permanently. The LED shows the charging status in three colors from green (full) to yellow and finally red (empty). When the light turns red, about 15 minutes of operation remain.
4. Set the desired channel with the channel selector switch.

### Set Microphone Sensitivity

The proper adjustment of the microphone sensitivity provides a good hearing impression for the listeners. A second person, a receiver with earphones and a small screwdriver are required.

1. Switch the transmitter on.
2. Switch the receiver on and put on the earphones.
3. Set the volume of the receiver to the middle.
4. Speak into the microphone. Do not adjust the receiver volume.
5. Using the screwdriver, adjust the microphone sensitivity. Carefully insert the screwdriver into the opening at the microphone sensitivity control and adjust sensitivity by turning the screwdriver.
6. Readjust until the receiver has a pleasant listening experience.
7. The sensitivity is now set correctly.

## TravelGuide: Receiver

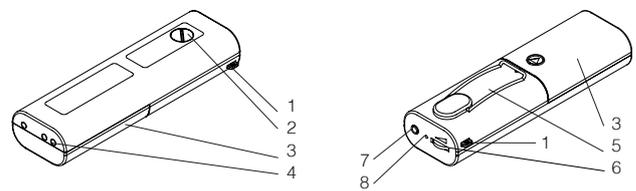

1. Eyelet for neck strap
2. Channel selector switch
3. Battery compartment
4. Charging contacts
5. Clip
6. Volume control dial
7. Earphone jack
8. LED

### Switching On/Off and Connecting Earphones

The receiver is switched on by plugging in the earphones.

1. Plug the earphone plug completely in the earphone jack of the receiver.
2. The LED at the top of the unit flashes briefly. If the battery charge is low, the LED lights up continuously. This indicates that there is approximately 2 h of battery life left.
3. The device is ready.

By unplugging the earphones the receiver is turned off.

### Adjust the Volume and Put on Earphones

To avoid ear damage, adjust the volume using the volume control dial to a low value.

MEDER uses ergonomic earphones, which are suitable for both ears. Put the supplied headphones on the ear so that the cable points backwards.

Check the volume on the earphones and adjust the volume with the volume control dial so that you can understand the speaker clearly.

### Setting a Channel

To set the channel proceed as follows:

1. Check the channel at the transmitter.
2. Set the desired channel on the receiver. Set the channel by using the channel selector switch.